

HOW TO REPLACE A BROKEN SWITCH LEVER  
ON YOUR WH-6000 HANDHELD MICROPHONE



# [ STEP 1:

- Make sure the microphone is in the OFF position



# [ STEP 2:

- Take your screw driver and pry off the microphone's switch plate cover



# [ STEP 3:

- Remove the broken plastic switch lever from the microphone



# [ STEP 4: ]

- Inspect the main switch on the microphone to ensure that it is still intact and not broken. If this switch is broken, please call Anchor for further repair instructions



# [ STEP 5:

- Note the “teeth” on the new switch lever



# [ STEP 6: ]

- Place the new switch lever so it engages the main switch and apply pressure until the lever snaps into place



# [ STEP 7: ]

- Secure the switch plate cover over the new switch by applying pressure to snap it into place





Questions?

Contact Anchor for assistance

Tel: 1-800-262-4671

Email: [sales@anchoraudio.com](mailto:sales@anchoraudio.com)