




HOW TO REPLACE THE BATTERY IN YOUR EXPLORER 6000/7500 series

or

VOYAGER PB-2500/3000 series

You will need one LIBH-BAT Replacement Battery

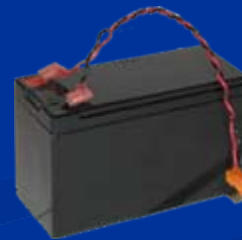

151mm X 65mm X 94mm 12V 7-9AH

STEP #1

- First remove the two Allen screws holding the handle. Remove the handle and place to the side.



STEP #2

- Unscrew the 12 Phillips head screws found along the outside of the Explorer's case.
- Do not remove any of the screws from the back panel that hold the control panel.




STEP #3

- Separate the front of the case from the rear carefully.
- Remove fiberglass insulation.





STEP #4

- You should now be able to see the Explorer's battery held in place by a metal bracket.

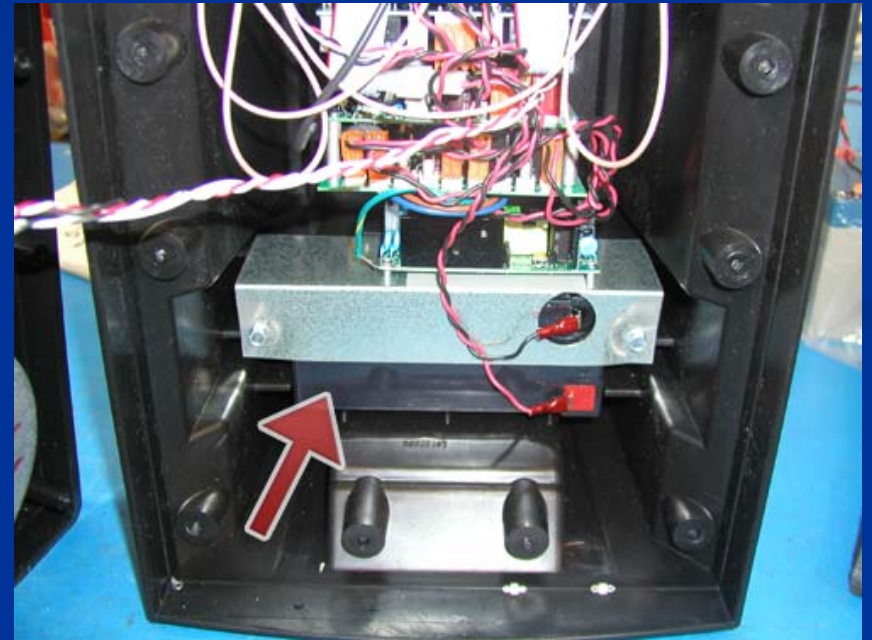

STEP #5

- Detach the red and black battery cables
- Unscrew the hex nuts on the metal bracket.

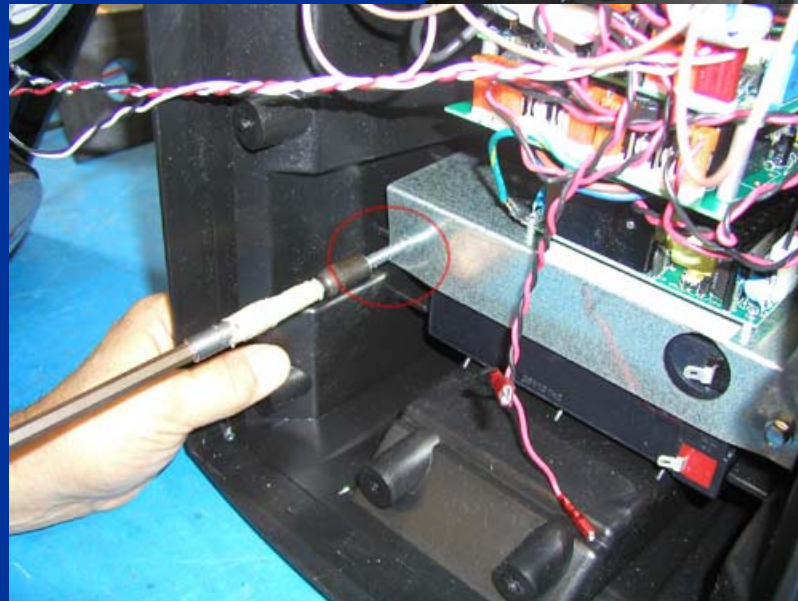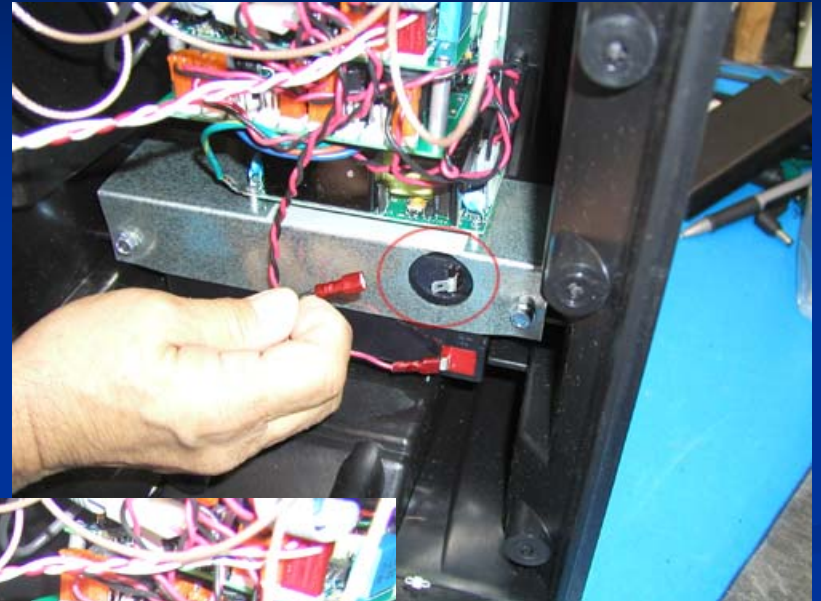

STEP #6

- Remove the metal bracket and pull out the old battery.
- Install the new battery, remembering to connect the red battery lead to the positive terminal (red) and the black lead to the negative terminal (black)



STEP #7

- Re-assemble the speaker and charge your battery.
- Before you use your Explorer, insure it has a full charge.



STEP #8

- If all else fails, contact Anchor for assistance
- Tel: 1-800-262-4671
- Email: sales@anchoraudio.com



Anchor Audio Portable Sound Systems

THANKS FOR WATCHING