



HAVING TROUBLE W/ YOUR SOUND SYSTEM?

CONDITION	POSSIBLE CAUSE
No Sound (power LED = OFF)	<ul style="list-style-type: none"> power switch is in OFF position batteries are fully discharged - LED may flash briefly confirm proper charger - replace if necessary no output from source input cable unplugged or input volume control is low or off short in external speaker cable or speaker total external speaker impedance < 8 ohm batteries are not fully charged or need to be replaced
Charge Indicator Not On No Sound (power LED = ON)	<ul style="list-style-type: none"> poor connection on input cable input signal too strong input cable not shielded
Shortened Battery Life	
Distorted Sound	
Excessive Hum or Noise	

HAVING TROUBLE W/ YOUR WIRELESS SYSTEM? (WIRELESS MODELS ONLY)

CONDITION	POSSIBLE CAUSE
No Sound (RX ON Indicator = ON)	<ul style="list-style-type: none"> wireless volume control is to low or off no mic plugged into belt-pack transmitter sound system not turned on transmitter power switch turned off low battery or no battery in transmitter transmitter and receiver are not on the same channel
No Sound (RX ON Indicator = OFF)	

ANCHOR AUDIO CUSTOMER SERVICE

888/444-6077
310/784-2300

www.anchoraudio.com

MEGAVOX PRO TECHNICAL SPECIFICATIONS

Rated Power Output	22 watts	Inputs	
Max SPL @ Rated Power	126 dB @ 1 meter	Line	Hi-Z, unbalanced, 1/4"-phone
Frequency Response	400 Hz - 10 kHz	Mic 1	Lo-Z, unbalanced, 1/4"-phone <i>(used for wireless on MEGA-6000U1)</i>
Charger (RC-6000)	18V DC/universal input <i>(100Vac - 240Vac, 50 - 63Hz)</i>	Mic 2	Lo-Z, unbalanced, 1/4"-phone
Battery	12 volt rechargeable, 5.4 AH	Outputs	
Dimensions (HWD)	13 x 9 x 14" / 33 x 23 x 36 cm	Line (post fader)	Lo-Z, 1/4"-phone
Weight	15 pounds / 6.8 Kg	Speaker	4ohm, unswitched, 1/4"-phone



(Specifications subject to change without notice)

MEGAVOX PRO

PORTABLE PUBLIC ADDRESS SOUND SYSTEM

OWNER'S MANUAL



CONTENTS

GETTING STARTED 2

SETTING UP / CONNECTING YOUR MEGAVOX PRO SOUND SYSTEM 2/3

FEEDBACK / SPEAKER STAND SETUP 3

BASIC SYSTEM OPERATION / CARING FOR YOUR BUILT-IN BATTERIES 4

CARING FOR & CHARGING YOUR BUILT-IN BATTERIES..... 5

OPERATING THE BUILT-IN UHF WIRELESS RECEIVER 6

MEGAVOX PRO ACCESSORIES 6

OPERATING THE WIRELESS MICROPHONE / TRANSMITTER..... 7

HAVING TROUBLE W/ YOUR SOUND SYSTEM? 8

MEGAVOX PRO TECHNICAL SPECIFICATIONS 8




Anchor Audio, Inc.
Portable Sound Systems • Torrance, California

A MESSAGE FROM THE OWNER

Thank you for choosing an Anchor Audio portable sound system. Our products incorporate state-of-the-art design and the finest quality of materials and workmanship. We're proud of our products and appreciate the confidence which you have shown by selecting an Anchor system.

I hope you'll take a few minutes to review this manual. We've incorporated several unique features into our products, and your knowledge of how to use them will enhance the performance and your enjoyment of the system.

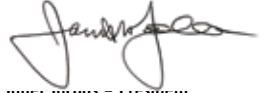
James J. Johnson - President
on behalf of all Anchor Employees

GETTING STARTED

Please check your new unit carefully for any damage which may have occurred during shipment. Each Anchor product is carefully inspected at the factory and packed in specially designed boxes for safe transport.

Notify the freight carrier immediately of any damage to the shipping box or product. Repack the unit in the original box and wait for inspection by the carrier's claim agent. Notify your dealer of the pending freight claim.

NOTE: All damage claims must be made with freight carrier!

RETURNING SYSTEMS FOR SERVICE OR REPAIR

For service or repair, please contact the dealer you purchased your system from or Anchor Audio Customer Service at (888) 444-6077 to obtain a RA (Return Authorization) number. All shipments to Anchor Audio must include an RA number and must be shipped prepaid. C.O.D. shipments will be refused and returned at your expense.

IMPORTANT: Save the shipping box & packing materials, they were specially designed to ship your unit!

WARRANTY REGISTRATION

Visit our website at www.anchoraudio.com and select "Warranty Registration". Complete the online form to activate the six-year limited warranty on your MegaVox PRO sound system and two-year limited warranty for microphones.

SETTING UP YOUR MEGAVOX PRO SOUND SYSTEM

We recommend placing your sound system between the audience and the presenter, facing the audience and raised above their heads using a speaker stand or table. This benefits listeners in the rear of the crowd, minimizes the risk of overpowering those in the front and helps prevent feedback by keeping microphone users behind the sound system.

SINGLE SYSTEM PLACEMENT

Place your unit along the least trafficked aisle pointing towards the center of the audience.

MULTIPLE SYSTEM PLACEMENT

Place units along aisles pointing just off the audience center line, over the crowd's head. With the sound system placed properly it should provide sufficient coverage.


Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or Retailer for recycling advice.



OPERATING THE WIRELESS MICROPHONE / TRANSMITTER


CHANNEL SELECTION - HANDHELD TRANSMITTER

1. Unscrew battery cover on bottom of microphone
2. Set the CHANNEL SELECTOR dial to match the channel setting of your receiver
3. Replace battery cover and tighten firmly

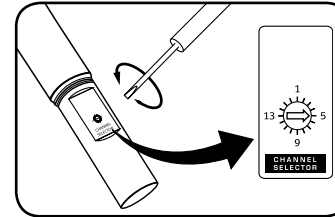

CHANNEL SELECTION - BODY-PACK TRANSMITTER

1. The channel selection dial is located on the side of the transmitter
2. Set the CHANNEL selection dial to match the channel setting of the receiver

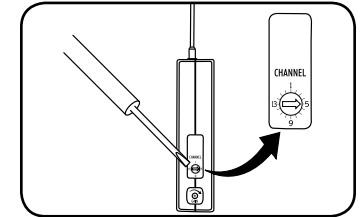

NOTE: When using dual wireless, each microphone must be set to a different channel!

USING YOUR WIRELESS MICROPHONES


After you have set the transmitter channel (see above) you are ready to use your wireless microphone:

1. Body-pack transmitter users must insert the mic plug into the transmitter jack marked MIC
2. Turn the transmitter power switch to ON (The red LED will flash when the mic is turned on. If the red LED stays on, the battery is low)
3. Turn the MegaVox PRO power switch to ON
4. The RX indicators will light (only one indicator will light at a time) when the wireless signal is being transmitted and received

CAUTION: Harmful feedback may occur when walking in front of a sound system or speaker with a wireless microphone. Always point microphone away from speakers!


REPLACE BATTERY - HANDHELD TRANSMITTER

1. Unscrew battery cover on bottom of microphone
2. Replace old batteries with 2 fresh size 'AA' alkaline batteries
3. Replace battery cover and tighten firmly

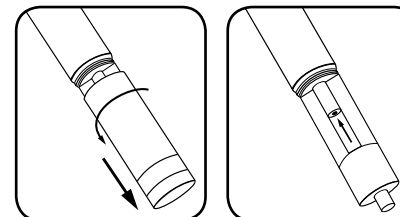

REPLACE BATTERY - BODY-PACK TRANSMITTER

1. Slide open battery cover on front of transmitter
2. Replace old batteries with 2 fresh size 'AA' alkaline batteries
3. Replace battery cover by sliding firmly into place

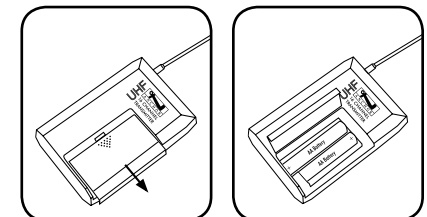

NOTE: Transmitter power must be OFF when changing batteries!


DIVERSITY WIRELESS BY ANCHOR AUDIO

Anchor Audio UHF wireless is a 16 channel, diversity wireless system that receives signals with two independent antennae. With diversity wireless the receiver processes the stronger signal, effectively minimizing dropouts and interference from other transmitting sources. The antennae are mounted internally so there are no obstructions or risk of damage.

CHANNEL SELECTION - BUILT-IN RECEIVER

Select a channel, set the built-in receiver & microphone transmitter to that channel before using your wireless system.

1. Choose any available wireless channel/frequency from 1 thru 16 (see page 7 for transmitter instructions)
2. Set the Wireless Channel Selector Knob to the channel/frequency you choose in step 1

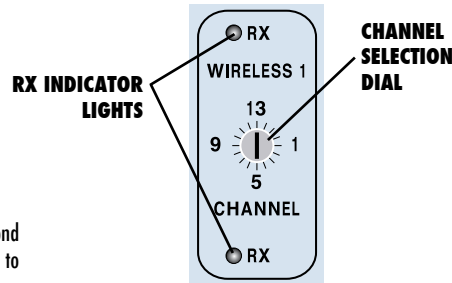

If you have two wireless receivers repeat above for the second receiver. Remember each receiver/transmitter pair must be set to different channels to avoid interference.

NOTE: Ongoing wireless interference? The frequency you selected may be in use by other systems in the area! Change channels until you find a clear frequency!

NEED MORE HELP? View demonstration videos on proper system setup and operation at our website: www.anchoraudio.com

MEGAVOX PRO ACCESSORIES

MEGA-6001- MegaVox PRO Companion Speaker
Unpowered companion speaker (speaker cable not included)

SC-50 - Heavy Duty Speaker Cable
50' speaker cable, connect MEGA-6001 companion speaker

SS-550 - Heavy Duty Speaker Stand
Adjustable stand made of black, anodized aluminum

NL-MEGA - Storage Cover
Durable nylon fitted speaker storage/dust cover

HC-1640 - Hard Case
For travel or storage - holds one MegaVox Pro & accessories

MIC-90 - Handheld Wired Microphone
Anchor's dynamic, balanced, low impedance microphone w/ unidirectional pick-up pattern, mic "on/off" switch & 20' cable

ANCHOR UHF WIRELESS

WH-6000 - Handheld Microphone/Transmitter

WB-6000 - Body Pack Transmitter

Works w/ hands free microphones (mic not included)

Body Pack Transmitter Hands Free Microphones:

CM-60 - Collar Microphone

Lightweight, low-profile mic

EM-TA4F - UltraLite Microphone

Hands free "Over-the-Ear" mic

LM-60 - Lapel Microphone

Lightweight, clip-on lapel mic

HBM-TA4F - Headband Microphone

Ultra-lightweight headband mic


FEEDBACK

Feedback, a howling noise or shrill sound, is self-generated by the sound system. It's caused by a microphone picking up the sound coming from the speaker and then re-amplifying it. Once a feedback loop starts it continues until the system is adjusted.


FEEDBACK CAUSES

- Microphone too close, pointing towards or in front of speaker
- Volume setting is too loud for room
- Sound reflecting off hard surfaces

CORRECT SYSTEM PLACEMENT

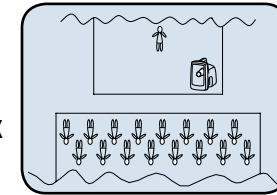

WRONG SYSTEM PLACEMENT

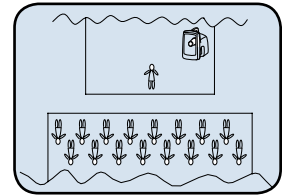

AVOIDING & ELIMINATING FEEDBACK

- Point microphone in a different direction
- Keep microphone away from the speaker
- Place speaker in FRONT of the microphone
- Reduce the sound system volume levels

CAUTION: Feedback can damage your equipment & may be hazardous to hearing.

CONNECTING TWO OR MORE MEGAVOX PRO SOUND SYSTEMS

UNPOWERED MEGAVOX PRO COMPANION SPEAKER (MEGA-6001)

Connect one end of a speaker cable (SC-50) to the SPKR OUT jack on the back of a powered MegaVox PRO sound system. The other end connects to the jack labeled IN on the back of a MegaVox PRO unpowered companion speaker.

NOTE: AC power is not required for an unpowered companion speaker.

POWERED MEGAVOX PRO SOUND SYSTEMS W/ LINE OUT

Connect speaker cable (EX-50PP) from LINE OUT on first powered MegaVox PRO to LINE IN on second powered MegaVox PRO. Set volume level of the second system to maximum, this gives full volume control to the first or primary sound system.


DAISY-CHAINING

Use the Line Out method above to connect up to six powered MegaVox PRO PA Systems. Make all connections with power off.

Set volume level to maximum on all secondary systems so the primary unit Level Control sets the volume for the entire chain.


To avoid speaker popping, which can cause damage, power speakers on in order, primary unit first, and power speakers off in reverse order, primary unit last.

FIRST POWERED MEGAVOX PRO EX-50PP CABLE

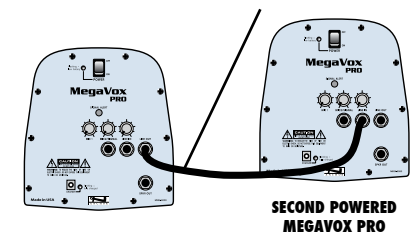

SPEAKER STAND SETUP

1. Loosen the Lower Collar Knob
2. Separate the stand legs until the leg support Cross Braces are parallel to the floor
3. Tighten the Lower Collar Knob

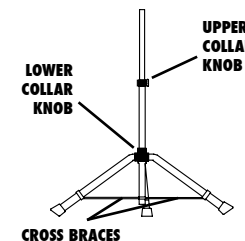

4. Loosen the Upper Collar Knob and extend the center pole
5. Adjust height and retighten the Upper Collar Knob
6. Place your Anchor sound system on the stand

BASIC SYSTEM OPERATION

NOTE: Fully charge batteries before first use!

1. Before turning the systems power on: Set all Input Level Controls to minimum and
2. Plug a microphone into a MIC jack and/or a line-level audio source into the LINE IN jack
3. Switch POWER to ON - The red BATTERY LED will turn on *(If the light flashes or stays off charge the battery)*
4. Slowly increase the Level Controls for the input jacks used to desired volume level

NOTE: See page 6 for wireless UHF instructions.

CARING FOR YOUR BUILT-IN BATTERIES

It is very important that you fully charge the batteries in your new sound system before the first time its used. To preserve battery life it is also recommended that batteries be fully charged as soon as possible after every use regardless of the length of operation.

UNDERSTANDING THE BATTERY LEVEL INDICATOR

LED Flashing Red: Battery charge is very low, in 15-30 minutes the Battery Protection Circuit will turn the system off.

LED Off: Battery is completely drained and must be charged.

NOTE: System can be used while batteries charge!

OPERATING IN AC MODE

Plug your sound system into an AC outlet. Operate as normal while charging the built-in batteries at the same time. The Charger LED will light during charging and flash when the battery is fully charged.

BATTERY SERVICE TIME

With the batteries fully charged you can expect approx.:

8-12 hrs @ Medium Volume 3-6 hrs @ Full Volume

Of continuous music input *(longer for speech)*. Service time will vary depending on control settings and use of accessories *(built-in wireless receivers and/or a companion speaker)*.

IMPORTANT: For longer battery life always store your system w/ batteries fully charged!

SYSTEM STORAGE & BATTERIES

Always store your sound system with the batteries fully charged. For extended periods of storage leave the system plugged into an AC outlet. If this is not possible, charge the system at least once each month for a minimum of 24 hours.

POWER SWITCH

SIGNAL ALERT BUTTON
System emits a loud, air-horn type tone
Push & hold button to activate siren and control volume w/ MIC/SIGNAL control

WIRELESS LEVEL CONTROLS

MIC - INPUT JACK
1/4" Phone - Unbalanced, low impedance, no phantom power

CHARGER INPUT JACK

BATTERY CHARGE INDICATOR

MEGAVOX PRO CONTROL PANEL

Model: **MEGA-6000U2**

WIRELESS RECEIVERS
(see page 6)

MIC/SIGNAL ALERT LEVEL CONTROL

LINE IN LEVEL CONTROL


LINE OUT - OUTPUT JACK
1/4" Phone - Unbalanced, combined output of all active system inputs
(Output is post source level; any volume fluctuations for a specific input will affect this output signal level)

LINE IN - INPUT JACK
1/4" Phone - For any line-level signal source: tape/VCR/CD/DVD players, musical instruments, etc.

SPEAKER OUT - OUTPUT JACK
1/4" Phone - Drives the MEGA-6001 unpowered companion speaker

Using companion speaker will decrease battery service time requiring more frequent charging

CAUTION: The signal alert sound can produce VERY high or harmful sound pressure levels that can cause hearing damage.

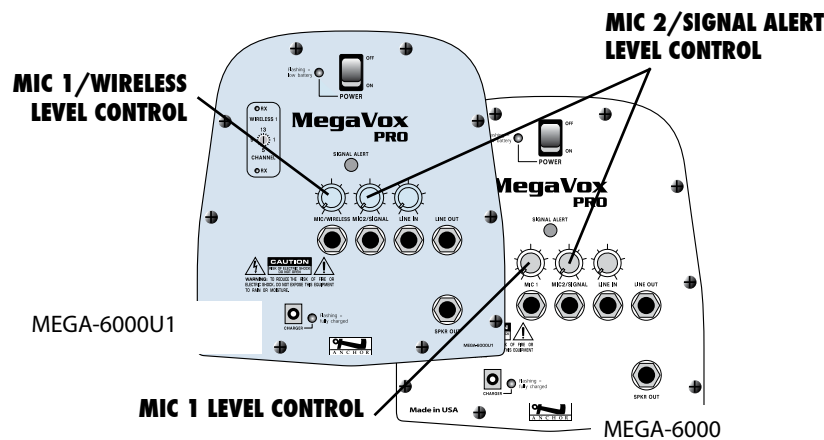

NOTE: All in/out line connections must be made w/ shielded cable to avoid hum, buzzing, or radio interference.

CHARGING YOUR BUILT-IN BATTERIES

An automatic charging system is built-in to your MegaVox PRO Sound System. It is designed to properly charge and maintain the systems built-in batteries. To charge batteries:

1. Plug the power cord into your sound system
2. Plug the other end of the cord into AC outlet - Charger LED will stay on during charging
3. Batteries fully charge in approx. 6-8 hrs - Charger LED will flash

When in AC mode the system automatically transfers power from the battery charger to the power amplifier at high volume output, causing the Charger LED to flicker.